

Preamplifier

AY 3400

Installation and Operating Instructions

EN

English

CONTENT

1.SAFETY INFORMATIONS	II
2.GENERAL INFORMATIONS	1
2.1 Description	1
3.TECHNICAL SPESIFICATIONS	2
4.INSTALLATION and WIRING	3
4.1 Installation.....	3
4.2 Wiring.....	4
5.COMMISSIOING	4
6.MAINTANANCE	5

1. SAFETY INFORMATION

Installation, commissioning and maintenance of this device must be done by a qualified personnel in compliance with the operating instructions. Otherwise device and related equipments may be damaged and personnel may be injured. General installation and safety instructions for pipeline and plant construction, as well as the proper use of tools and safety equipment must also be complied with.

National and local regulations must be taken into consideration.



Warning!

Please make sure to remove the main supply before installation. Otherwise this may cause damage to the product, personal injuries or even death

1.1 Tools

Before starting work, make sure that you have suitable tools and consumables available.

1.2 Temperature

Let the temperature to cool down after isolation to avoid danger of burns.

1.3 Freezing

Required precautions must be taken at the places where they may be exposed to temperatures below freezing point.

1.4 Lighting

Make sure there is enough lighting, particularly where detailed or tough work is required.

1.5 Pressure

Make sure that any pressure is isolated and safely vented to atmospheric pressure. Do not assume that the system has depressurised even when the pressure gauge indicates zero.

1.6 Access

Before attempting to work on the product, safe Access must be ensured. If necessary, lifting gear should be used.

1.7 Residual hazards

The external surface of the product may be very hot. If used at the maximum operating conditions according to the specs, the surface temperature of some products may reach temperatures of 239°C.

1.8 Hazardous environment

Plant rooms are usually explosion risk areas. There may be lack of oxygen, dangerous gases extremes of temperature, hot surfaces, fire hazard excessive noise, moving machinery.

1.9 Suitable protective clothing

In order to be protected against the hazards of chemicals, high temperature, radiation, noise, falling objects, and dangers to eyes and face, anyone around requires protective clothing suitable in the plant room.

1.10 Hazardous liquids or gases

Be aware of that it cannot be known what may have been in the pipeline at previous usage. Consider: flammable materials, substances hazardous to health, extremes of temperature.

1.11 Supervision

All work must be carried out or be supervised by a suitably competent person. Installation and operating personnel should be trained in the correct use of the product according to the Installation and Operation Instructions.

1.12 Disposal

Unless otherwise stated in the Installation and Operation Instructions, this product is recyclable and no ecological hazard.

1.13 Returning products

When returning products to Vira Isı ve Endüstriyel Ürünler A.Ş the customers must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk.

2. GENERAL INFORMATIONS

2.1 Description

As steam is generated, the water in the boiler evaporates and water must be added with a feed water pump to maintain the level of the boiler. Water should be kept at the right level to avoid damaging the boiler and to ensure efficient operation.

For this reason, a level control system that monitors and controls the water level, detects whether the water level is low and gives an alarm, performs the necessary actions to shut off the feed water pump or burner.

Of course, it is recommended to have an external indicator, such as level gauges, to see the water level step by step. Another suggestion is to have a secondary level control system in case of damage to the primary one.

In the modulating level control system, the feed pump runs continuously and an automatic valve (between the feed pump and the boiler) controls the feed water flow rate to meet the steam demand.

Level Controller SK 3400, Capacitance Level Probe SD 3400 and Level Control Valve SKV 3400 working in conjunction with the capacitance principle of conductive liquids provides level control. The controller and probe are suitable for use in liquids of all different properties such as water, condensate, boiler water. The Modulating Level Control System can be used in waters with a conductivity of more than $10 \mu\text{S} / \text{cm}$ (at 25°C).

In the Modulating Level Control System, the water level of the boiler is controlled by opening and closing the SKV 3400 Level Control Valve SKV 3400 at the water levels determined by the Capacitance Level Probe SD 3400. There are also two different alarm outputs, low and high.

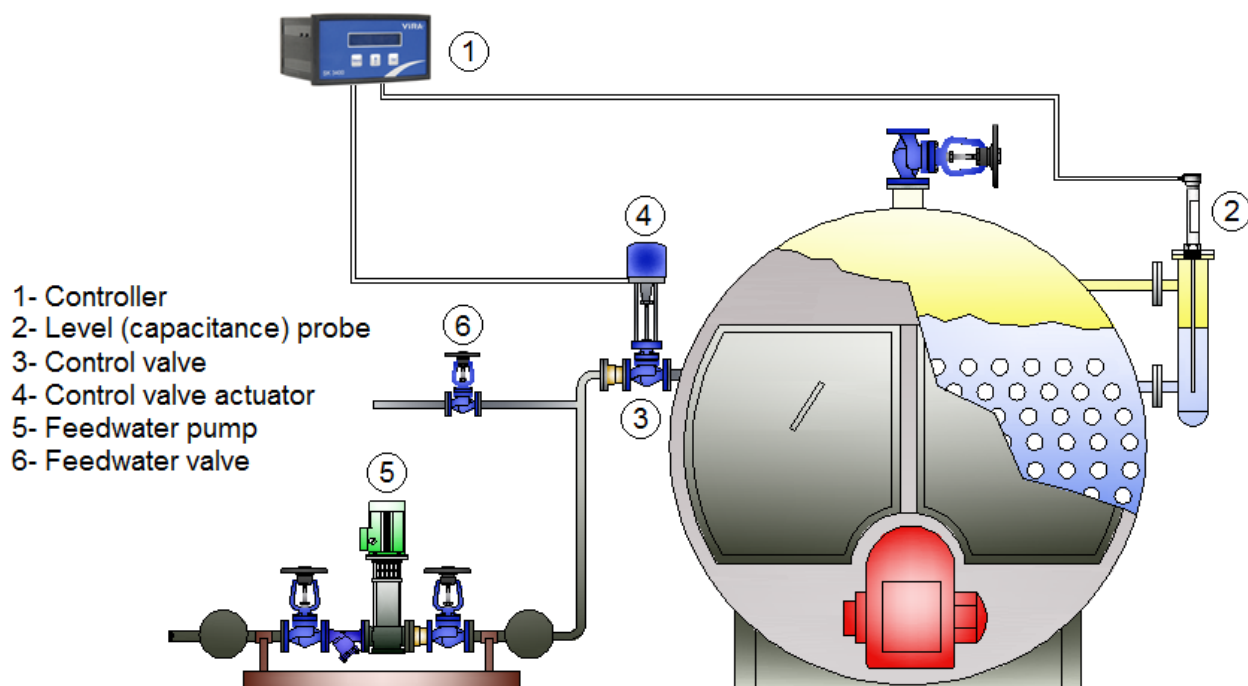


Figure 1: Modulating Level Control System Application

3. TECHNICAL SPECIFICATIONS

Maximum Ambient Temperature	: 70 °C
Maximum Wire Length	: 100 m (preamp. to controller)
Output Voltage	: 1 – 5 Vdc
Weight	: 0,26 kg

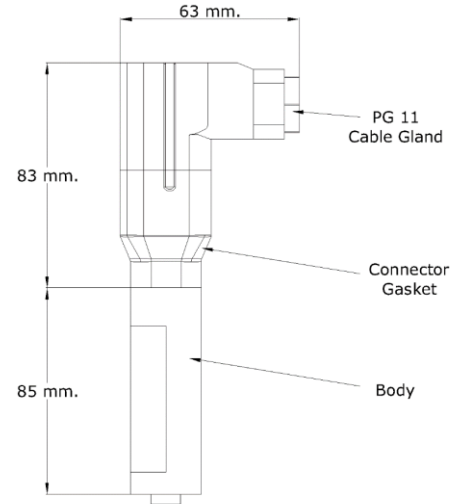


Figure 2: AY 3400 Preamplifier

4. INSTALLATION and WIRING

4.1 Installation

The AY 3400 is screwed into the top of the capacitance probe and hand tightened. An 'O' ring is supplied to provide a seal.

Use 'O' ring between preamplifier and capacitance probe like in Figure 3.

Note: Do not use any equipment to mount preamplifier into the top of the capacitance probe, use hand.

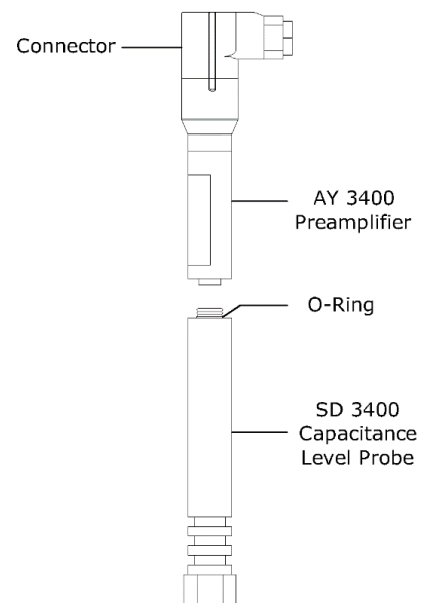


Figure 3: Mounting Preamplifier
AY 3400 to Level Probe SD3400

4.2 Wiring


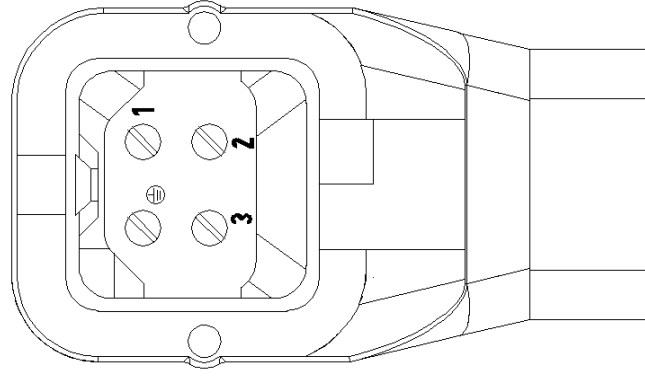


Figure 4: Cable Connector of Preamplifier AY 3400

Remove the screws on the cable connector and remove the male connector. Make the cable connections between SK 3400 and AY 3400 cable connector with 3x1 mm² screened cable like in Figure 5.

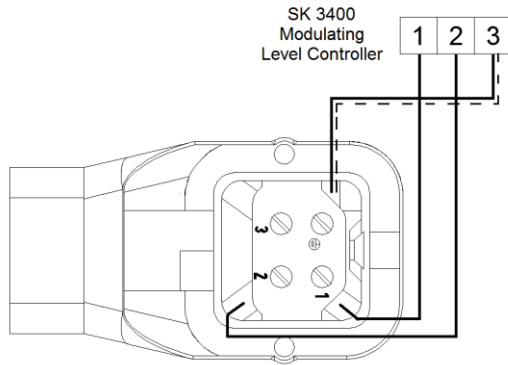

Note: Connect cable screen (shield) to only probe side using \oplus terminal. **Left the controller side of screen unconnected.**

Figure 5: Cable Connections Between
Controller and Capacitance Probe

5. COMMISSIONING

Önemli!



Make sure that the phase and neutral connections are connected to the correct terminals in the SK 3400 Modulating Level Control.

Always allow the AY 3400 Preamplifier to stabilise at its normal operating temperature for at least 15 minutes before commissioning of the controller.

6. MAINTANANCE



Önemli!

Before unmount the probe, boiler pressure must be reduced to atmospheric pressure (0 bar g) and boiler temperature must be at a safe level.

Do not unmount the probe before disconnect the cables. Otherwise cables may be damaged.

Regular function tests are recommended.

When any fault situation occurs or maintenance is necessary, please contact with “**Vira Isı Service Department**”.

Vira Isı ve Endüstriyel Ürünler A.Ş.

Metal İş Sanayi Sitesi 11. Blok No: 37-39

İkitelli / İSTANBUL

Tel : 0 212 549 57 70

Fax : 0 212 549 48 58

E-mail : info@viraisi.com

: servis@viraisi.com

Web : www.viraisi.com